



Alfa Laval CB20

Brazed plate heat exchanger

Alfa Laval CB brazed plate heat exchangers provide efficient heat transfer with a small footprint.

Applications

- HVAC heating and cooling
- Refrigeration
- Oil cooling
- Industrial heating and cooling

Benefits


- Compact
- Easy to install
- Self-cleaning
- Low level of service and maintenance is required
- All units are pressure and leak tested
- Gasket free

Design


The brazing material seals and holds the plates together at the contact points ensuring optimal heat transfer efficiency and pressure resistance. Using advanced design technologies and extensive verification guarantees the highest performance and longest possible service life.

Based on standard components and a modular concept, each unit is custom-built to meet the specific requirements of each individual installation.


Examples of connections




External thread



Internal thread

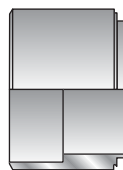

Soldering

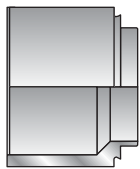

Welding



Technical Data

Standard materials

Cover plates	Stainless steel
Connections	Stainless steel
Plates	Stainless steel
Brazing filler	Copper

Dimensions and weight¹

A measure (mm)	$8 + (1.5 * n)$
A measure (inches)	$0.31 + (0.06 * n)$
Weight (kg) ²	$0.6 + (0.08 * n)$
Weight (lb) ²	$1.32 + (0.18 * n)$

- n = number of plates
- Excluding connections


Standard data

Volume per channel, litres (gal)	0.028 (0.0072)
Max. particle size, mm (inch)	0.6 (0.024)
Max. flowrate ¹ m ³ /h (gpm)	8.8 (39)
Flow direction	Parallel
Min. number of plates	10
Max. number of plates	110

- Water at 5 m/s (16.4 ft/s) (connection velocity)


Dimensional drawing

Measurements in mm (inches)

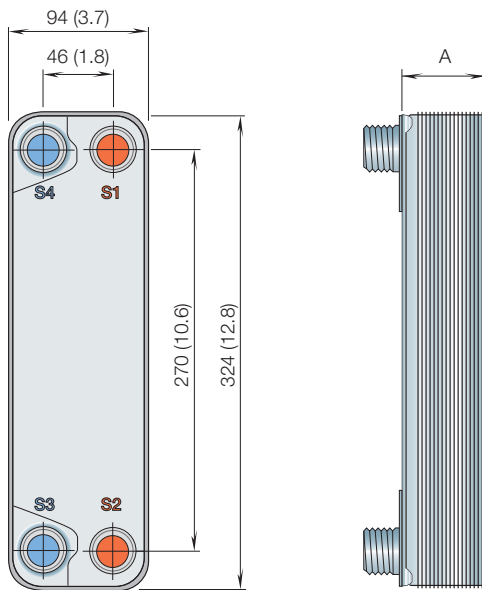

Design pressure and temperature

CB20 – PED approval pressure/temperature graph

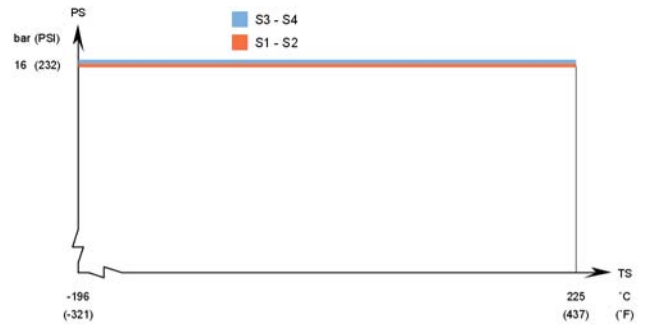

Designed for full vacuum.

Alfa Laval plate heat exchangers are available with a wide range of pressure vessel approvals. Please contact your Alfa Laval representative for more information.

NOTE: Values above are to be used as an indication. For exact values, please use the drawing generated by the Alfa Laval configurator or contact your local Alfa Laval representative.