

PRODUCT DATA SHEET

Purofine® PFA400MB

Polystyrenic Gel, Type I Strong
Base Anion Resin, Chloride form,
Uniform Particle Size, Mixed Bed
Grade

PRINCIPAL APPLICATIONS

- Demineralization
- Mixed Bed anion component

ADVANTAGES

- High operating capacity
- Good resistance to organic fouling
- Uniform particle size

TYPICAL PACKAGING

- 1 ft³ Sack
- 25 L Sack
- 5 ft³ Drum (Fiber)
- 1 m³ Supersack
- 42 ft³ Supersack

LENNTECH
WATER TREATMENT SOLUTIONS

TYPICAL PHYSICAL & CHEMICAL CHARACTERISTICS:

Polymer Structure	Gel polystyrene crosslinked with divinylbenzene
Appearance	Spherical Beads
Functional Group	Type I Quaternary Ammonium
Ionic Form	Cl ⁻ form
Total Capacity	1.3 eq/L (28.4 Kgr/ft ³) (Cl ⁻ form)
Moisture Retention	48 - 54 % (Cl ⁻ form)
Mean Diameter	570 ± 50 µm
Uniformity Coefficient	1.1 - 1.2
Reversible Swelling, Cl ⁻ → OH ⁻ (max.)	20 %
Specific Gravity	1.08
Shipping Weight (approx.)	670 - 700 g/L (41.9 - 43.8 lb/ft ³)
Temperature Limit	100 °C (212.0 °F) (Cl ⁻ form)
Temperature Limit	60 °C (140.0 °F) (OH ⁻ form)



LENNTECH

info@lennotech.com Tel. +31-152-610-900


www.lennotech.com Fax. +31-152-616-289

Hydraulic Characteristics

PRESSURE DROP

The pressure drop across a bed of ion exchange resin depends on the particle size distribution, bed depth, and voids volume of the exchange material, as well as on the flow rate and viscosity of the influent solution. Factors affecting any of these parameters—such as the presence of particulate matter filtered out by the bed, abnormal compressibility of the resin, or the incomplete classification of the bed—will have an adverse effect, and result in an increased head loss. Depending on the quality of the influent water, the application and the design of the plant, service flow rates may vary from 10 to 40 BV/h.

PRESSURE DROP ACROSS RESIN BED

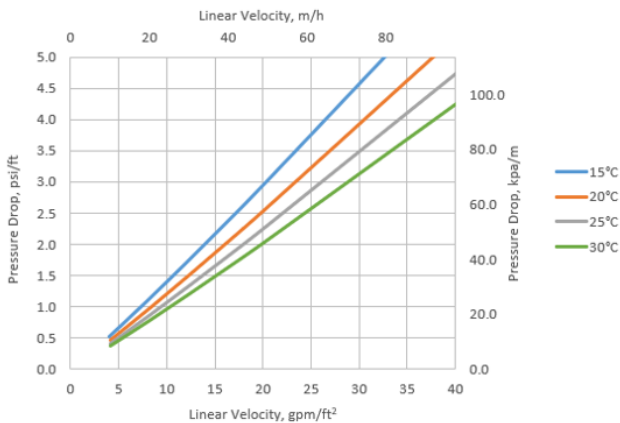

BACKWASH

During up-flow backwash, the resin bed should be expanded in volume between 50 and 70% for at least 10 to 15 minutes. This operation will free particulate matter, clear the bed of bubbles and voids, and reclassify the resin particles ensuring minimum resistance to flow. When first putting into service, approximately 30 minutes of expansion is usually sufficient to properly classify the bed. It is important to note that bed expansion increases with flow rate and decreases with influent fluid temperature. Caution must be taken to avoid loss of resin through the top of the vessel by over expansion of the bed.

BACKWASH EXPANSION OF RESIN BED

