

X-FLOW COMPACT 27 HELIX - ULTRAFILTRATION MEMBRANE

MEMBRANE ELEMENT DATASHEET

8 INCH 8.0 MM Helix Compact 27
ARTICLE CODE : 7821KRJ99R

APPLICATIONS

- Effluent treatment
- Membrane bioreactor

GENERAL SOLVENT RESISTANCE

Since the resistance of the membrane to solvents strongly depends on the actual process conditions, the indications given below should only be considered as guidelines.

Acids, pH >2	+
Bases, pH <11	+
Organic esters, ketones, ethers	--
Aliphatic alcohols	++
Aliphatic hydrocarbons	++
Halogenated hydrocarbons	++
Aromatic hydrocarbons	+
Polar organic solvents	--
Oils	++

Sodium Hypochlorite

- Typical 200 ppm, at ≤ 40 °C
- Maximum 500 ppm
- 250.000 ppm hours cumulative at 30 °C

CLEANING CHEMICAL RESISTANCE

Depending on the nature of the feed solution the following cleaning agents can be chosen:


NaOCl (active chlorine)	500 ppm max.
H2O2	1000 ppm max.
NaOH	pH ≤ 11
Nitric acid	pH ≥ 1
Phosphoric acid	pH ≥ 1
EDTA	pH ≤ 11
Citric acid	
Enzymatic compounds	

It is recommended to keep the pH between 1 and 11 and not to exceed a temperature of 40 °C during cleaning and/or disinfection. If those standard cleaning techniques fail to remove the foulants, more concentrated cleaning solutions can be tried. Please contact X-Flow for recommendations. It has to be stressed, however, that no warranty can be given on the efficiency of any cleaning nor on the membrane performance after such cleaning attempts.

ELEMENT SPECIFICATIONS

Hydraulic membrane diameter [mm]	Membrane area [m ²]	Feed connection D ₀ [mm]	Module length L ₀ [mm] (±1)	Saddle diameter D ₁ [mm]	Module diameter D ₂ [mm]	Permeate connection d ₀ [mm]	Permeate length l ₀ [mm] (±1)	Permeate position l ₁ [mm] (±1)
8.0	27	220.0	3000	240	213	73.0	165	90

For connection specifications please check the corresponding connection configuration data sheet.

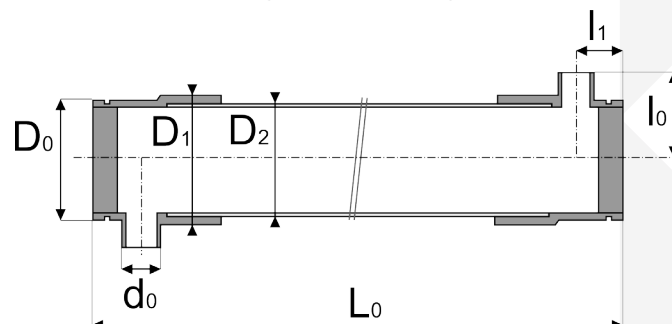

X-FLOW COMPACT 27

HELIX - ULTRAFILTRATION MEMBRANE

MEMBRANE ELEMENT DATASHEET

OPERATING SPECIFICATIONS

Max. feed pressure	Max. permeate pressure	Max. trans-membrane pressure	Max. temp.
[kPa]	[kPa]	[kPa]	[°C]
20- 60 °C 800	at 20 °C 650	at 20 - 60 °C -60 ~ +250	60
	at 30 °C 550		
	at 40 °C 450		
	at 50 °C 380		
	at 60 °C 300		

- To avoid mechanical damage, do not subject the membrane module or element to sudden temperature changes, particularly decreasing. Do not exceed 60 °C process temperature. Bring the module or element back to ambient operating temperature slowly (typical value 1 °C/min). Failure to adhere to this guideline can result in irreparable damage

MEMBRANE CHARACTERISTICS

- Hydrophilic tubular polyvinylidene fluoride membrane cast on a polyester carrier
- The Helix structure of the membrane surface enhances the turbulence and reduces the membrane fouling
- Structure asymmetric
- Mean pore size of 30 nm
- Developed for use in large-scale processes for water purification
- High performance and a very good anti-fouling behaviour
- Membrane elements can be backflushed for efficient membrane cleaning resulting in a higher average product flux

TECHNICAL SPECIFICATIONS

Weight Specifications

Dry weight of membrane element
ca. 40 kg [88 lbs]

Membrane element filled with water
ca. 100 kg [220 lbs]

Materials of Construction

Housing PVC-C, drinking water quality
 Potting EP resin
 Membrane - Material composed of polyvinylidene fluoride
 - Carrier is a composite polyester woven/non woven

Process Characteristics (water, 20°C)

Hydraulic membrane diameter	Crossflow flow rate (*)	Pressure-drop across module (turbulent flow) (**)
[mm]	[m³/h]	[kPa]
8.0	67.9 x v	3.5 x L ₀ x v ^{1.8}

(*) superficial velocity (v) in m/s [ft/s]

(**) module length (L₀) in m

X-FLOW COMPACT 27 HELIX - ULTRAFILTRATION MEMBRANE

MEMBRANE ELEMENT DATASHEET

STORAGE

New membrane modules can be stored as supplied.

Membrane modules should be stored in a dry, normally ventilated place, away from sources of heat, ignition and direct sunlight. Store between 0 and 40 °C.

The membrane modules should not be subjected to any freezing temperatures.

After use, UF membranes need to be stored wet at all times.

To avoid biological growth during shutdowns or storage, wet membranes should be treated with a compatible biocide. The membrane is compatible with many common disinfecting agents or biocidal preservatives. For short-term shutdowns, a daily flush with permeate quality water containing up to 2.0 ppm free available chlorine for 30 to 60 minutes may be adequate for bacteria control.

In case of long-term storage, membranes should be cleaned before the disinfection step is carried out. For disinfection, a 1% sodium metabisulfite solution can be used. In either situation, modules should be stored hydraulically filled.



LENNTECH

info@lenntech.com Tel. +31-152-610-900

www.lenntech.com Fax. +31-152-616-289