PRODUCT DATA SHEET

Purolite[®] **C100EMB**

Functional Group

< 425 µm (max.)

Ionic Form

Polystyrenic Gel, Strong Acid Cation Resin, Sodium form, Mixed Bed Grade, Potable Water Grade

PRINCIPAL APPLICATIONS

- Mixed Bed cation component
- Softening Potable Water
- Food and beverage processing

ADVANTAGES

- Efficient regeneration
- Good kinetic performance
- Low extractables

Sulfonic Acid

Na⁺ form

TYPICAL PACKAGING

- 1 ft³ Sack
- 25 L Sack
- 5 ft3 Drum (Fiber)
- 1 m3 Supersack
- 42 ft³ Supersack



Polymer Structure Gel polystyrene crosslinked with divinylbenzene Appearance Spherical Beads

Particle Size Range	425 - 1200 μm
< 425 um (max.)	2 %

TYPICAL PHYSICAL & CHEMICAL CHARACTERISTICS:






Hydraulic Characteristics

PRESSURE DROP

The pressure drop across a bed of ion exchange resin depends on the particle size distribution, bed depth, and voids volume of the exchange material, as well as on the flow rate and viscosity of the influent solution. Factors affecting any of these parameters—such as the presence of particulate matter filtered out by the bed, abnormal compressibility of the resin, or the incomplete classification of the bed—will have an adverse effect, and result in an increased head loss. Depending on the quality of the influent water, the application and the design of the plant, service flow rates may vary from 10 to 40 BV/h.

PRESSURE DROP ACROSS RESIN BED

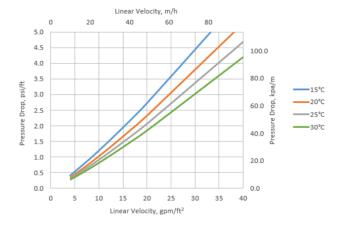

BACKWASH

During up-flow backwash, the resin bed should be expanded in volume between 50 and 70% for at least 10 to 15 minutes. This operation will free particulate matter, clear the bed of bubbles and voids, and reclassify the resin particles ensuring minimum resistance to flow. When first putting into service, approximately 30 minutes of expansion is usually sufficient to properly classify the bed. It is important to note that bed expansion increases with flow rate and decreases with influent fluid temperature. Caution must be taken to avoid loss of resin through the top of the vessel by over expansion of the bed.

BACKWASH EXPANSION OF RESIN BED

